


SAA4229 Installation Instructions


www.ergomart.com | 888 420 3200

1

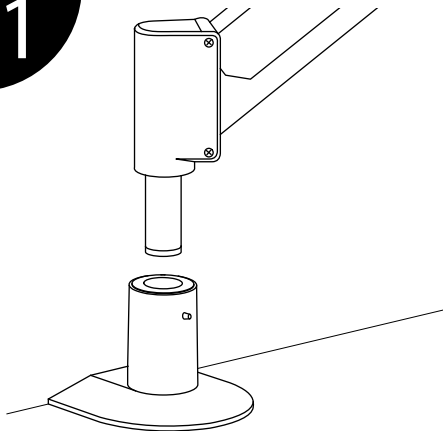


Insert arm pin into completely attached and assembled mount

2

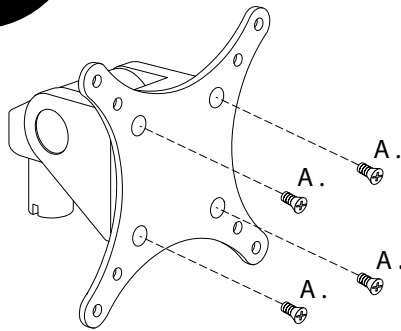


Attach correct VESA plate to tilter head

3

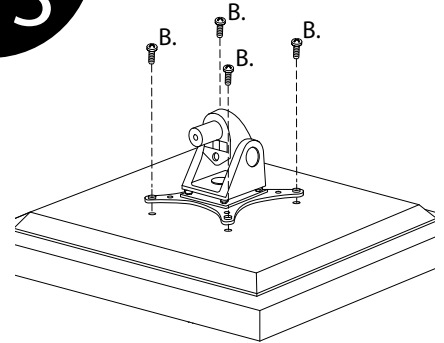


Attach tilter head/VESA plate to LCD

4

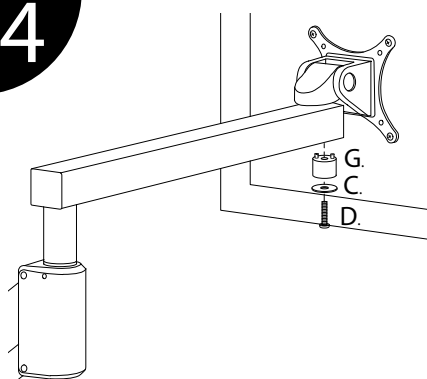


Slide tilter pin into the end of arm Secure with washer and screw
PLEASE NOTE: See supplemental instructions provided if using the XHD Spring Tilter-head

5

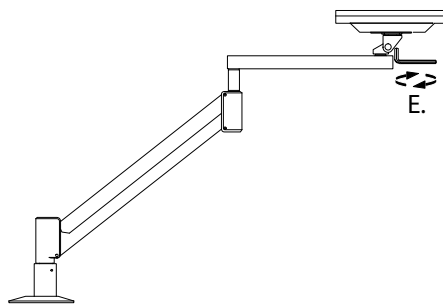


Adjust vertical tilt resistance on tilter head

6

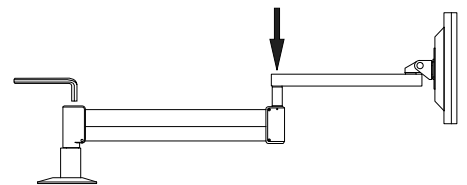


(This step may require two people)
A) Push arm down to horizontal position and hold
B) Rotate wrench CLOCKWISE to weaken arm
C) Once adjusted correctly, arm should float the LCD

7

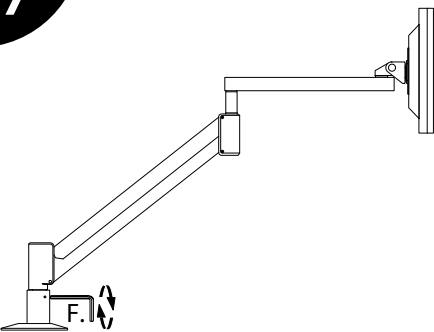

Increase resistance to rotation at articulation points by tightening small set screws
DO NOT OVERTIGHTEN

8

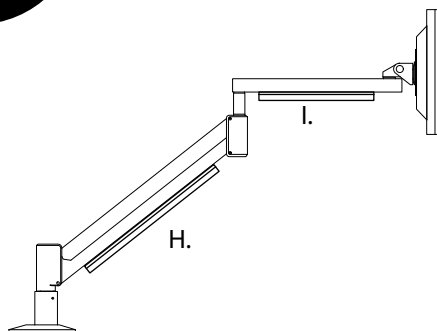

Use adhesive sides to fasten wire managers to arm.

9

Please call Ergomart at
888 420 3200
with your questions
www.ergomart.com

 
 
 
 





ERGOMART

Ergonomic solutions for office and light industrial work environments

©2011 Ergomart. All rights reserved.

SAA4229 Parts List

www.ergomart.com | 888 420 3200

   ITEM	DESCRIPTION/ PART NO.	QUANTITY
A. 	10-32 x 3/8" (9.525mm) Philips Flat Head Screw 701164	4
B. 	M4-12 Philips Pan Head Screw 702096	4
C. 	Tilter Washer 704197	1
D. 	10-32x1" Philips Pan Head Screw	1
E. 	7/32" (5.563mm) Allen Wrench 701127	1
F. 	3/32" (2.388mm) Allen Wrench 700146	1
G. 	Tilter Head Pin Spacer	1
H. 	16" Cable Cover 702830	1
I. 	8" Cable Cover 702830	1

ERGOMART

Ergonomic solutions for office and light industrial work environments

©2011 Ergomart. All rights reserved.