

ERGOMART

Ergonomic solutions for office and light industrial work environments

WM9135

Installation Instructions

Mounting Hardware is NOT included

Step 1 Attaching the Mount to the wall surface

Align 6 mounting screws into pre-drilled holes in mount. Mounting hardware is not provided.

For sheetrock/plasterboard applications, “molly” style expanding fasteners are recommended.

For installation directly into a known wood surface, #14 wood screws are recommended.

The installer must determine exactly what fastener is appropriate for that particular application.




Step 2 Attaching the VESA Bracket to the Rotating Device

Attach the adapter bracket to the rotating piece of the 9135 using the (4) 1/4-20 x 1/2 Philips Pan Head Screws. Insert the screws in the center pre-drilled holes of the adapter bracket.



Step 3 Attaching the VESA Bracket & Rotating Device to the Flat Panel

Carefully remove the base from the flat panel monitor. Align the adapter bracket with the hole pattern on the back of your LCD. Use the (4) four M4-12 Philips Pan Head Screws to attach the plate to the back of the monitor. Insert the screws in the outer pre-drilled holes in the adapter bracket.

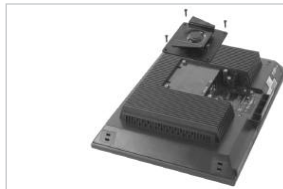

Step 4 Attaching the Flat Panel to the wall Mount

Slide the monitor into the wall mount. Be sure the rotating piece is thinner at the bottom and wider at the top.

