
Corner Shaper and Keyboard ArmInstallation Instructions


www.ergomart.com | 888 420 3200

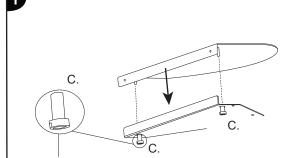

Fully tighten after step 2


Pre-assemble top and bottom portions of Corner Shaper using Barrel Nuts. (Tighten Barrel Nuts in Step 2)

If using the CornerShaper without a track

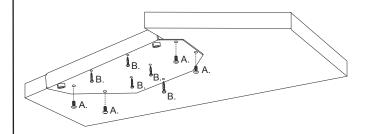


Attach Corner Shaper to the bottom of work surface using screws A and B in their designated holes.

If using the CornerShaper with a track

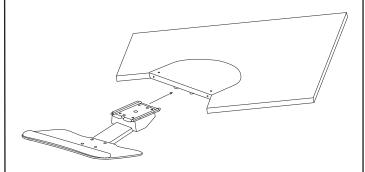


Slide Keyboard Arm into Track

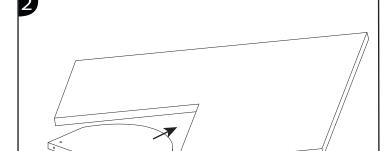


- 1) Slide Corner Shaper into corner of work surface
- 2) Tighten Barrel Nuts (shown in step 1)

If using the CornerShaper with a track

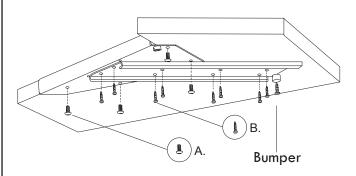

Attach Corner Shaper and track to the bottom of work surface using screws B. (Bumper purchased with track)

If using the CornerShaper with a track

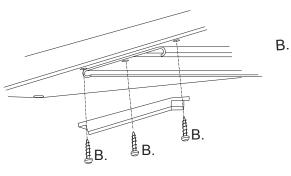


Install Stop

ERGOMART


6

Ergonomic solutions for office and light industrial work environments ©2014 Ergomart. All rights reserved.


Screw Diagrams

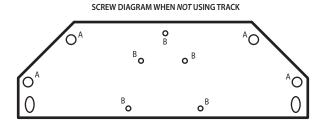

THIS IS THE DIAGRAM FOR STEP 3

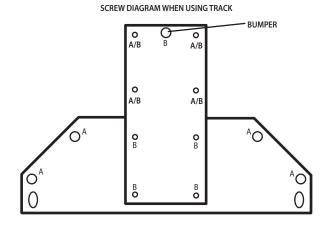

THIS IS THE DIAGRAM FOR STEP 4
("A/B" DESIGNATES THAT EITHER SCREW CAN BE USED)

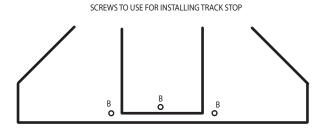

THIS IS THE DIAGRAM FOR STEP 6



Parts List

www.ergomart.com | 888 420 3200

	ITEM	DESCRIPTION/ PART NO.	QUANTITY
Hardware Included			
Α		10-32 x 3/8" Screws	10
В		10-11 x 5/8" Screws	5
С		Barrel Nuts	2

Tools Needed

Phillips Head Screwdriver

Slotted Screwdriver

1/8" Drill Bit (used for making pilot holes for Screw A)

ERGOMART

Ergonomic solutions for office and light industrial work environments ©2014 Ergomart. All rights reserved.