

## PM40 BB103 Installation Instructions

www.ergomart.com | 888 420 3200

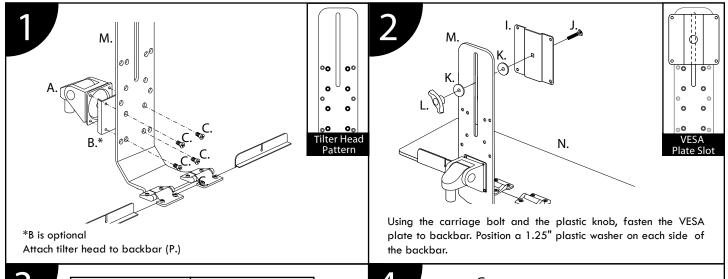


Nominal Diameter of Pole	Bushing Insert
1.5"	Ribbed Bushing
1.75"	Smooth Bushing
1.9"	Foam Pads
2"	No Bushing Required

Use chart to select proper bushing for the poles diameter. Mount comes, with easy to remove pad insert, ready for 1.9 inch poles and Ergomart series 192 pole.

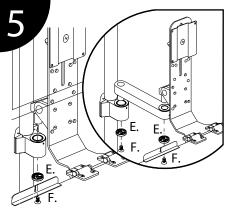

Slide tilter pin into the wall mount and secure with dog washer (E&F.)

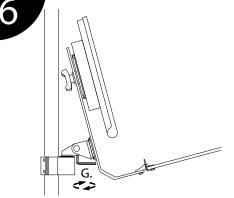

Increase resistance to tilt by adjusting set screw at the point of articulation using wrench (G.)

With the proper bushing or insert in place, attach the mount to the pole using the four  $\frac{1}{4}$ -20 x  $\frac{1}{2}$ " screws (G). To ensure a proper fit, first install all 4 screws without over-tightening. Then gradually tighten each screw a little at a time, moving from one screw to the next to keep the pressure relatively even.

Please call Ergomart at 888 420 3200 with your questions

www.ergomart.com

**ERGOMART** Ergonomic solutions for office and light industrial work environments ©2013 Ergomart. All rights reserved.