


TRS7000AKP

Installation Instructions


www.ergomart.com | 888 420 3200

1

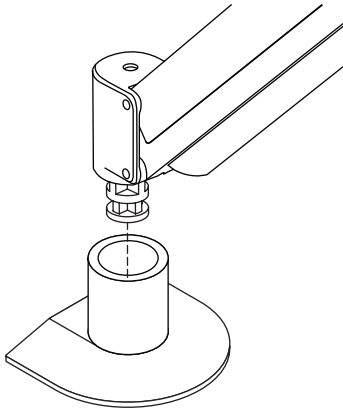


Insert arm pin into completely attached and assembled mount.

2

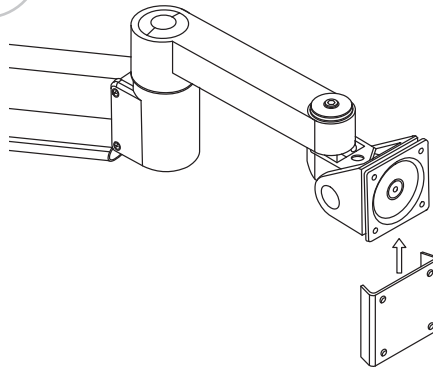


Slide TLT1 rotation stop over the face of the tilter as shown, aligning the holes .

3

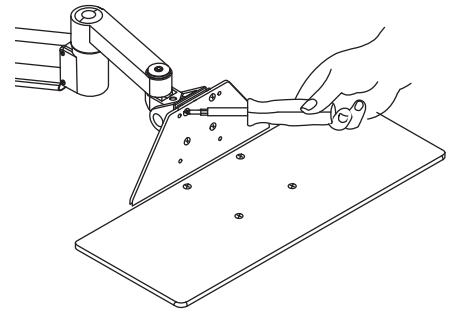


Attach keyboard bracket to tilter using four screws.

4

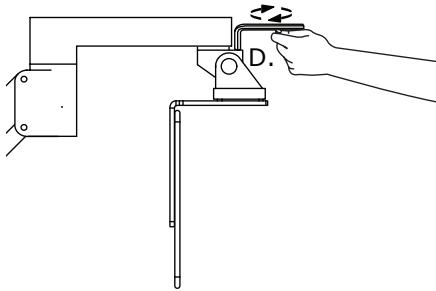


Adjust vertical tilt resistance on tilter head.

5

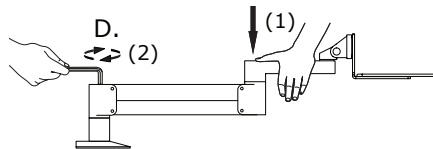


(1) Push arm down to horizontal position
(2) Rotate wrench CLOCKWISE to weaken arm. Rotating the wrench until it stops and then going back two full turns will set the arm at its lowest weight capacity.
Once adjusted correctly arm should float the keyboard tray.

6

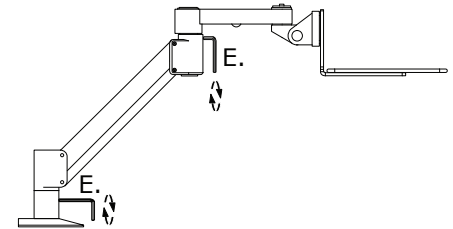


Increase resistance to rotation at articulation points by tightening small set screws.
DO NOT OVERTIGHTEN.

7

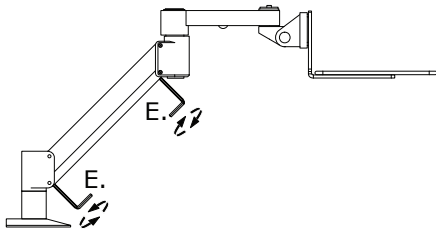

Increase resistance to vertical travel slightly with two hidden set screws on both ends of lifting arm. This control has modest effect and is set only after the gas cylinder has been adjusted to float the keyboard tray.

8

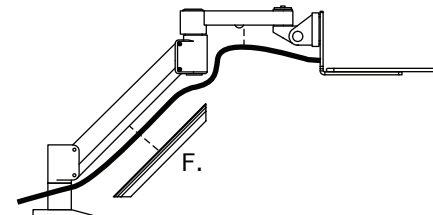

Please call Ergomart at

888 420 3200

with your questions
www.ergomart.com

ERGOMART








Ergonomic solutions for office and light industrial work environments

©2016 Ergomart. All rights reserved.

TRS7000AKP

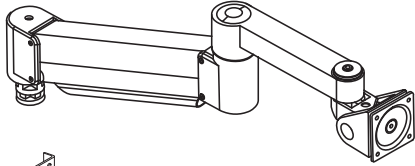Parts List

www.ergomart.com | 888 420 3200

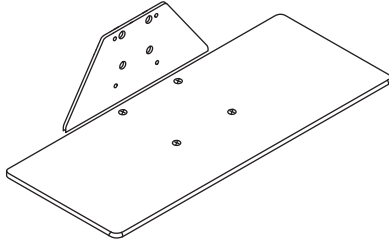ITEM	DESCRIPTION / PART NO.	QUANTITY
A. 	TRS7000AKP Arm SAA7000-500XS + A210	1
B. 	Rotation Prevention Bracket (Optional) TLT1	1
C. 	10-32 x 3/8" Phillips Flat Head Screw SCR10F037PHFL	4
D. 	7/32" (5.563mm) Allen Wrench 701127	1
E. 	3/32" (2.388mm) Allen Wrench 700146	1
F. 	Cable Cap 102043-9.5A	1
F. 	Phenolic Tray and Bracket A211	1

ERGOMART

Ergonomic solutions for office and light industrial work environments


©2016 Ergomart. All rights reserved.

FLEXIBLE MOUNT KIT


Installation Instructions

www.ergomart.com | 888 420 3200


Desk Clamp

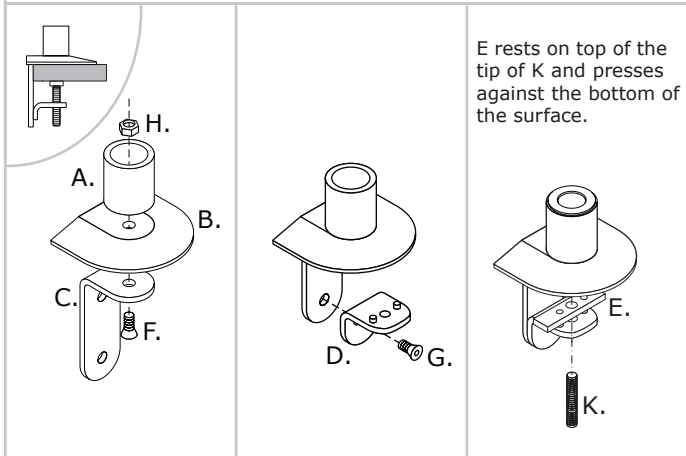


Thru-Desk

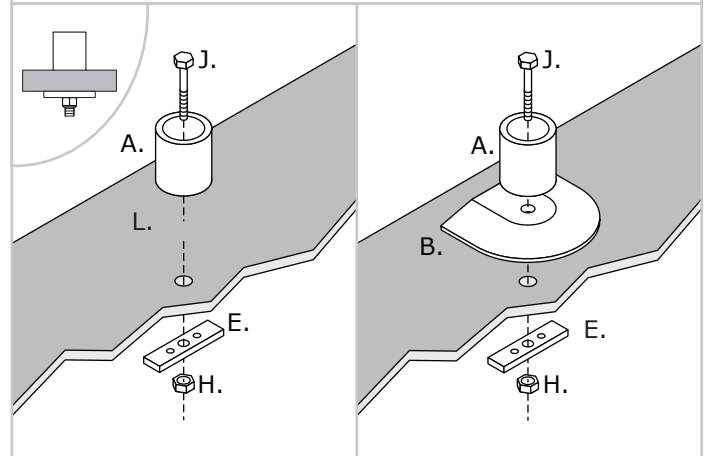


Wall Mount

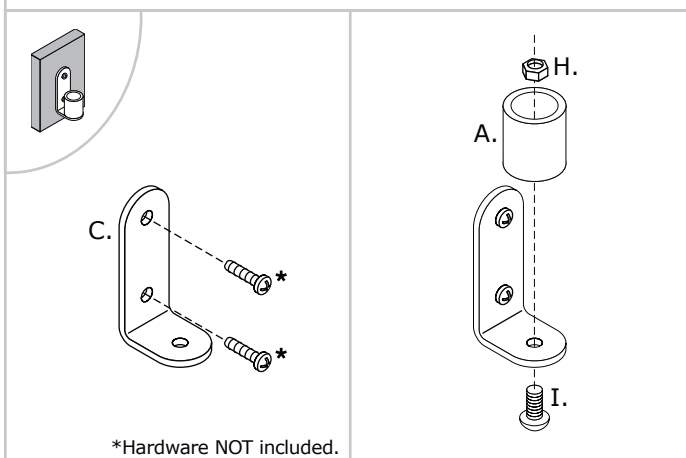


Reverse Wall Mount

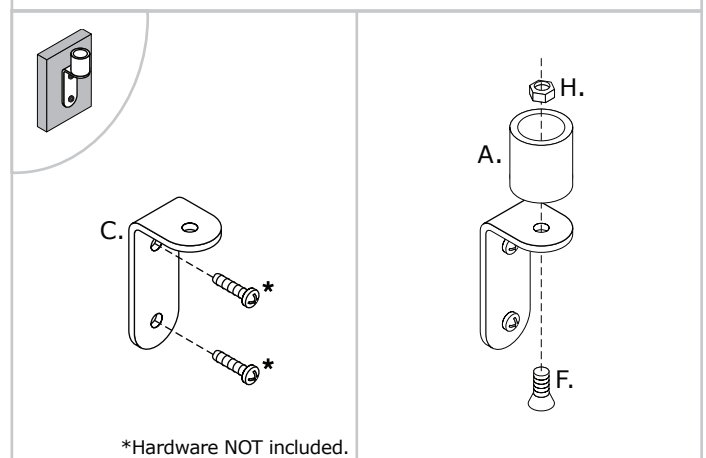

Grommet Hole

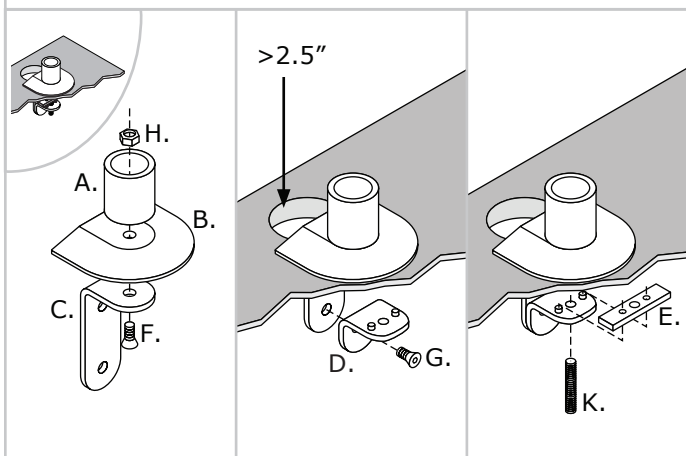

Side Bolt

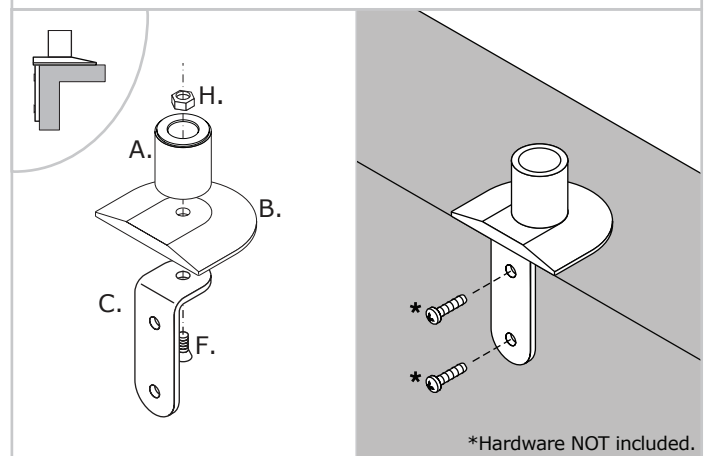

ERGOMART













Ergonomic solutions for office and light industrial work environments

©2016 Ergomart. All rights reserved.

FLEXIBLE MOUNT KIT

Parts List

www.ergomart.com | 888 420 3200

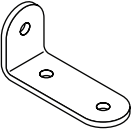ITEM	DESCRIPTION / PART NO.	QUANTITY
A. 	Column 401328, 8269	1
B. 	Base Plate 401417, 8321	1
C. 	Large "L" Bracket 701117, 702828	1
D. 	Small "L" Bracket 701116	1
E. 	3" (76.2mm) x 3/4" (19.05mm) x 1/4" (6.35mm) Rectangular Spacer 701544	1
F. 	3/8-16 x 1" (25.4mm) Flat Socket Cap Screw 701124, 701855	1
G. 	3/8-16 x 7/8" (22.225mm) Flat Socket Cap Screw 701799	1
H. 	3/8-16 Nylon Stop Nut 701418	1
I. 	3/8-16 x 7/8" (22.225mm) Button Socket Cap Screw 701122	1
J. 	3/8-16 x 2-1/2" (63.5mm) Hex Head Bolt 700268	1
K. 	1/2-13 x 3" (76.2mm) Socket Set Screw 701126	1
L. 	Foam Pad (Included with Model 7000 only) 701120	1

ERGOMART

Ergonomic solutions for office and light industrial work environments

©2016 Ergomart. All rights reserved.