

# TRS2718-BB103 Installation Instructions

www.ergomart.com | 888 420 3200

**1**

Insert arm into completely attached and assembled mount

**2**

\*B is optional  
Attach tilter head to backbar (P).

**3**

Using the carriage bolt and the plastic knob, fasten the VESA plate to backbar. Position a 1.25" plastic washer on each side of the backbar.

**4**

Attach slider VESA plate to LCD with screws (D).

Please call Ergomart at  
**888 420 3200**  
with your questions

www.ergomart.com

**5**

Slide tilter pin into end of arm, secure using dog washer (E&F).

**6**

Use clip in forearm and the cable cap (I) to manage cords.

→ Increase resistance to rotation at articulation points by tightening small sets screws using wrench (H.) DO NOT OVER TIGHTEN.

**7**

**WARNING: DO NOT** adjust arm unless in horizontal position with the arm loaded fully with monitor, keyboard etc. Attempting to do so in other positions WILL damage arm.

(1) Push arm down to horizontal position  
(2) Rotate wrench CLOCKWISE to weaken arm.  
Once adjusted correctly arm should float LCD.

















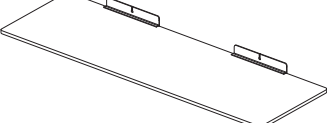
## ERGOMART

Ergonomic solutions for office and light industrial work environments

©2015 Ergomart. All rights reserved.

# TRS2718-BB103 Parts List

www.ergomart.com | 888 420 3200

ITEM	DESCRIPTION / PART NO.	QUANTITY
A. 	Sloped Tilter 405397	1
B. 	Rotation Prevention Bracket (Optional) 702949	1
C. 	10-32 x 3/8" (9.525mm) Phillips Flat Head Screw 702281	1 (4-pack)
D. 	M4-12 Phillips Pan Head Screw 702096	4
E. 	Dog Washer 105189	1
F. 	10-32 x 3/8" (9.525mm) FPhMS with Lock Patch 705198	1
G. 	7/32" Allen Wrench	1
H. 	3/32" (2.388mm) Allen Wrench 700146	1
I. 	Cable Cap 702830	1
J. 	Endcap Bumper 702829	1
K. 	Forearm Cap 702825	1
L. 	VESA Slider Plate (Sold separately; size specified by customer)	1
M. 	Carriage Bolt 5/16-18 x 1	4
N. 	1.25" Plastic Slider Plate Washer	2
O. 	Plastic Knob 5/16-18	1
P. 	BB103- Back Bar	1
Q. 	Phenolic Tray (Size and Depth Specified by Customer)	1

## **ERGOMART**

Ergonomic solutions for office and light industrial work environments

©2015 Ergomart. All rights reserved.