


LS1512

Installation Instructions

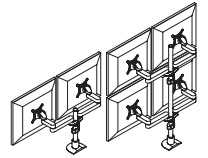

www.ergomart.com | 888 420 3200

<p>1</p> <p>Insert pole (K) into securely fastened mount. Tighten set screw on mount with 3/32" Allen wrench (A) so that pole resists spinning.</p>	<p>2</p> <p>Slide collar and dual arm (J) onto pole and tighten collar thumbscrew when adjusted to desired height. Tighten dual arm set screw with 3/32" Allen wrench until dual arm has desired rotational resistance.</p>	<p>3</p> <p>Attach the VESA adapter (C) to the tilter mechanism (B) using four 10-32 x 3/8" flat head screws (D).</p>
<p>4</p> <p>Attach VESA adapter to monitor using four M4 x 12mm screws (E). Some monitors may require a spacer kit. See page 2 for details.</p>	<p>5</p> <p>Insert tilter mechanism pin into end of arm. Align dog washer (F) with bottom of tilter mechanism pin and attach with flat head screw (G).</p>	<p>6</p> <p>Locate set screw on bottom of tilter mechanism by tilting monitor upward. Use 7/32 Allen wrench (H) to adjust rotation resistance to desired level.</p>
<p>7</p> <p>Turn screws on the bottom of arm extensions to adjust rotational resistance to the desired level.</p>	<p>8</p> <p>Place cables into wire management clamps under arms and use cable clip (I) to secure cables to pole.</p>	<p>Please call Ergomart at 888 420 3200 with your questions</p> <p>www.ergomart.com</p>


ERGOMART

Ergonomic solutions for office and light industrial work environments










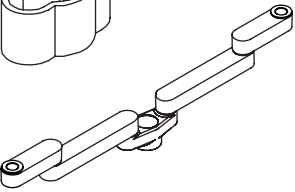


©2016 Ergomart. All rights reserved.

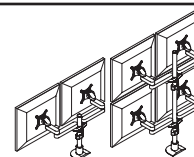LS1512



Parts List




www.ergomart.com | 888 420 3200

ITEM	DESCRIPTION / PART NO.	QUANTITY	
		Dual	Quad
A. 	3/32" Allen Wrench	1	2
B. 	Monitor Tilter	2	4
C. 	75/100mm VESA Adapter Plate	2	4
D. 	10-32 x 3/8" Philips Flat Head Screw	8	16
E. 	M4 x 12mm Philips Pan Head Screw	8	16
F. 	Dog Washer	2	4
G. 	10-32 x 3/8" FPhMS w/Lock Patch	2	4
H. 	7/32" Allen Wrench	1	1
I. 	Cable Clip	1	2
J. 	1512 Dual Arm	1	2
K. 	14 Inch P118 Pole	1	0
L. 	28 Inch P118 Pole	0	1

OPTIONAL SPACER KITS In some cases, the mounting surface on your monitor may be recessed further than permitted by VESA® standards. As a result, a spacer kit may be required.

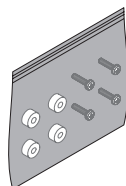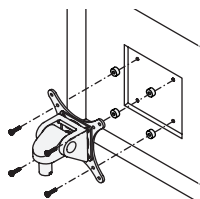

.25" Spacer Hardware Kit
(4) .25" Spacers
(4) M4 x 18mm Phillips Pan Head Screws
Order # SPKT-1/4

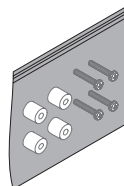

.5" Spacer Hardware Kit
(4) .5" Spacers
(4) M4 x 25mm Phillips Pan Head Screws
Order # SPKT-1/2

ERGOMART

Ergonomic solutions for office and light industrial work environments

©2016 Ergomart. All rights reserved.