

WM9110T Installation Instructions

www.ergomart.com | 888 420 3200

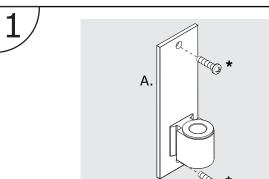


*Hardware NOT included.


The installer must determine exactly what fastener is appropriate for your particular application. If uncertain about mounting procedures contact Ergomart for technical assistance.

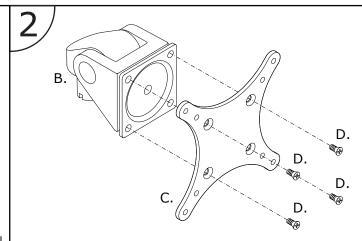


Attach correct VESA plate to tilter head.

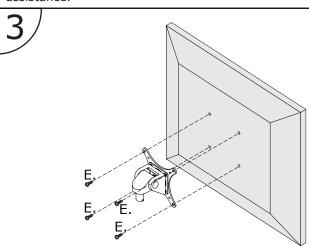


Attach tilter head/VESA plate to LCD.

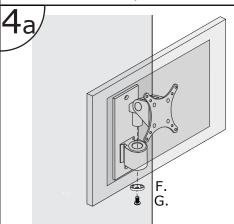

Slide tilter pin into the wall mount and secure with dog washer. $\,$

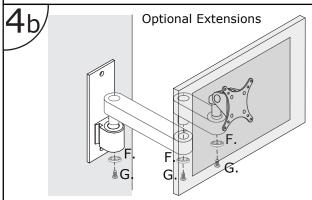

Install optional extensions by sliding extension pins into the wall mount or other extension and secure with dog washer. Slide tilter pin into extension and secure with dog washer.

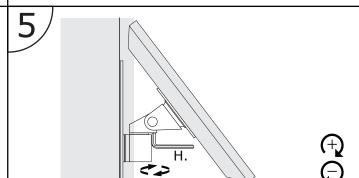

Increase resistance to tilt by adjusting set screw at the point of articulation using wrench.

Warning: See supplemental HD Spring Titler Head instructions before attempting to adjust an HD Spring Tilter Head.

ERGOMART

Ergonomic solutions for office and light industrial work environments ©2016 Ergomart. All rights reserved.

WM9110T Parts List

www.ergomart.com | 888 420 3200

ITEM	DESCRIPTION / PART NO.	QUANTITY
		WM9110 Wall Mount
A.	Wall Mount	1
B. (2)	Monitor Tilter 8013	1
C.	Star VESA	1
D. D.	10-32 x 3/8" (9.525mm) Philips Pan Head Screw 700115	4
E. ()	M4-12 Philips Pan Head Screw 702096	4
F.	Dog Washer	1
G.	Dog Washer Screw	1
H.	7/32" (5.563mm) Allen Wrench 701127	1
	7" Extension/3.5" Extension	Optional Components

ERGOMART

Ergonomic solutions for office and light industrial work environments ©2016 Ergomart. All rights reserved.